



ARM-JTAG-20-10

JTAG 20 PIN 0.1 INCH TO 10 PIN 0.05 INCH
ADAPTER



FEATURES

- Plug-in adapter for ARM-USB-OCD, ARM-USB-OCD-H, ARM-USB-TINY, ARM-USB-TINY-H which allows boards with small 10-pin 0.05 inch step connector to be programmed/debugged.
- Follows the official ARM JTAG layout
- The adapter works fine with Segger's J-LINK and other JTAG/SWD programmers/debuggers. 5V target powering through the adapter is not enabled by default.
- Dimensions 25x25 mm (~1x1") + 10 cm (~4") JTAG cable 0.05"step