



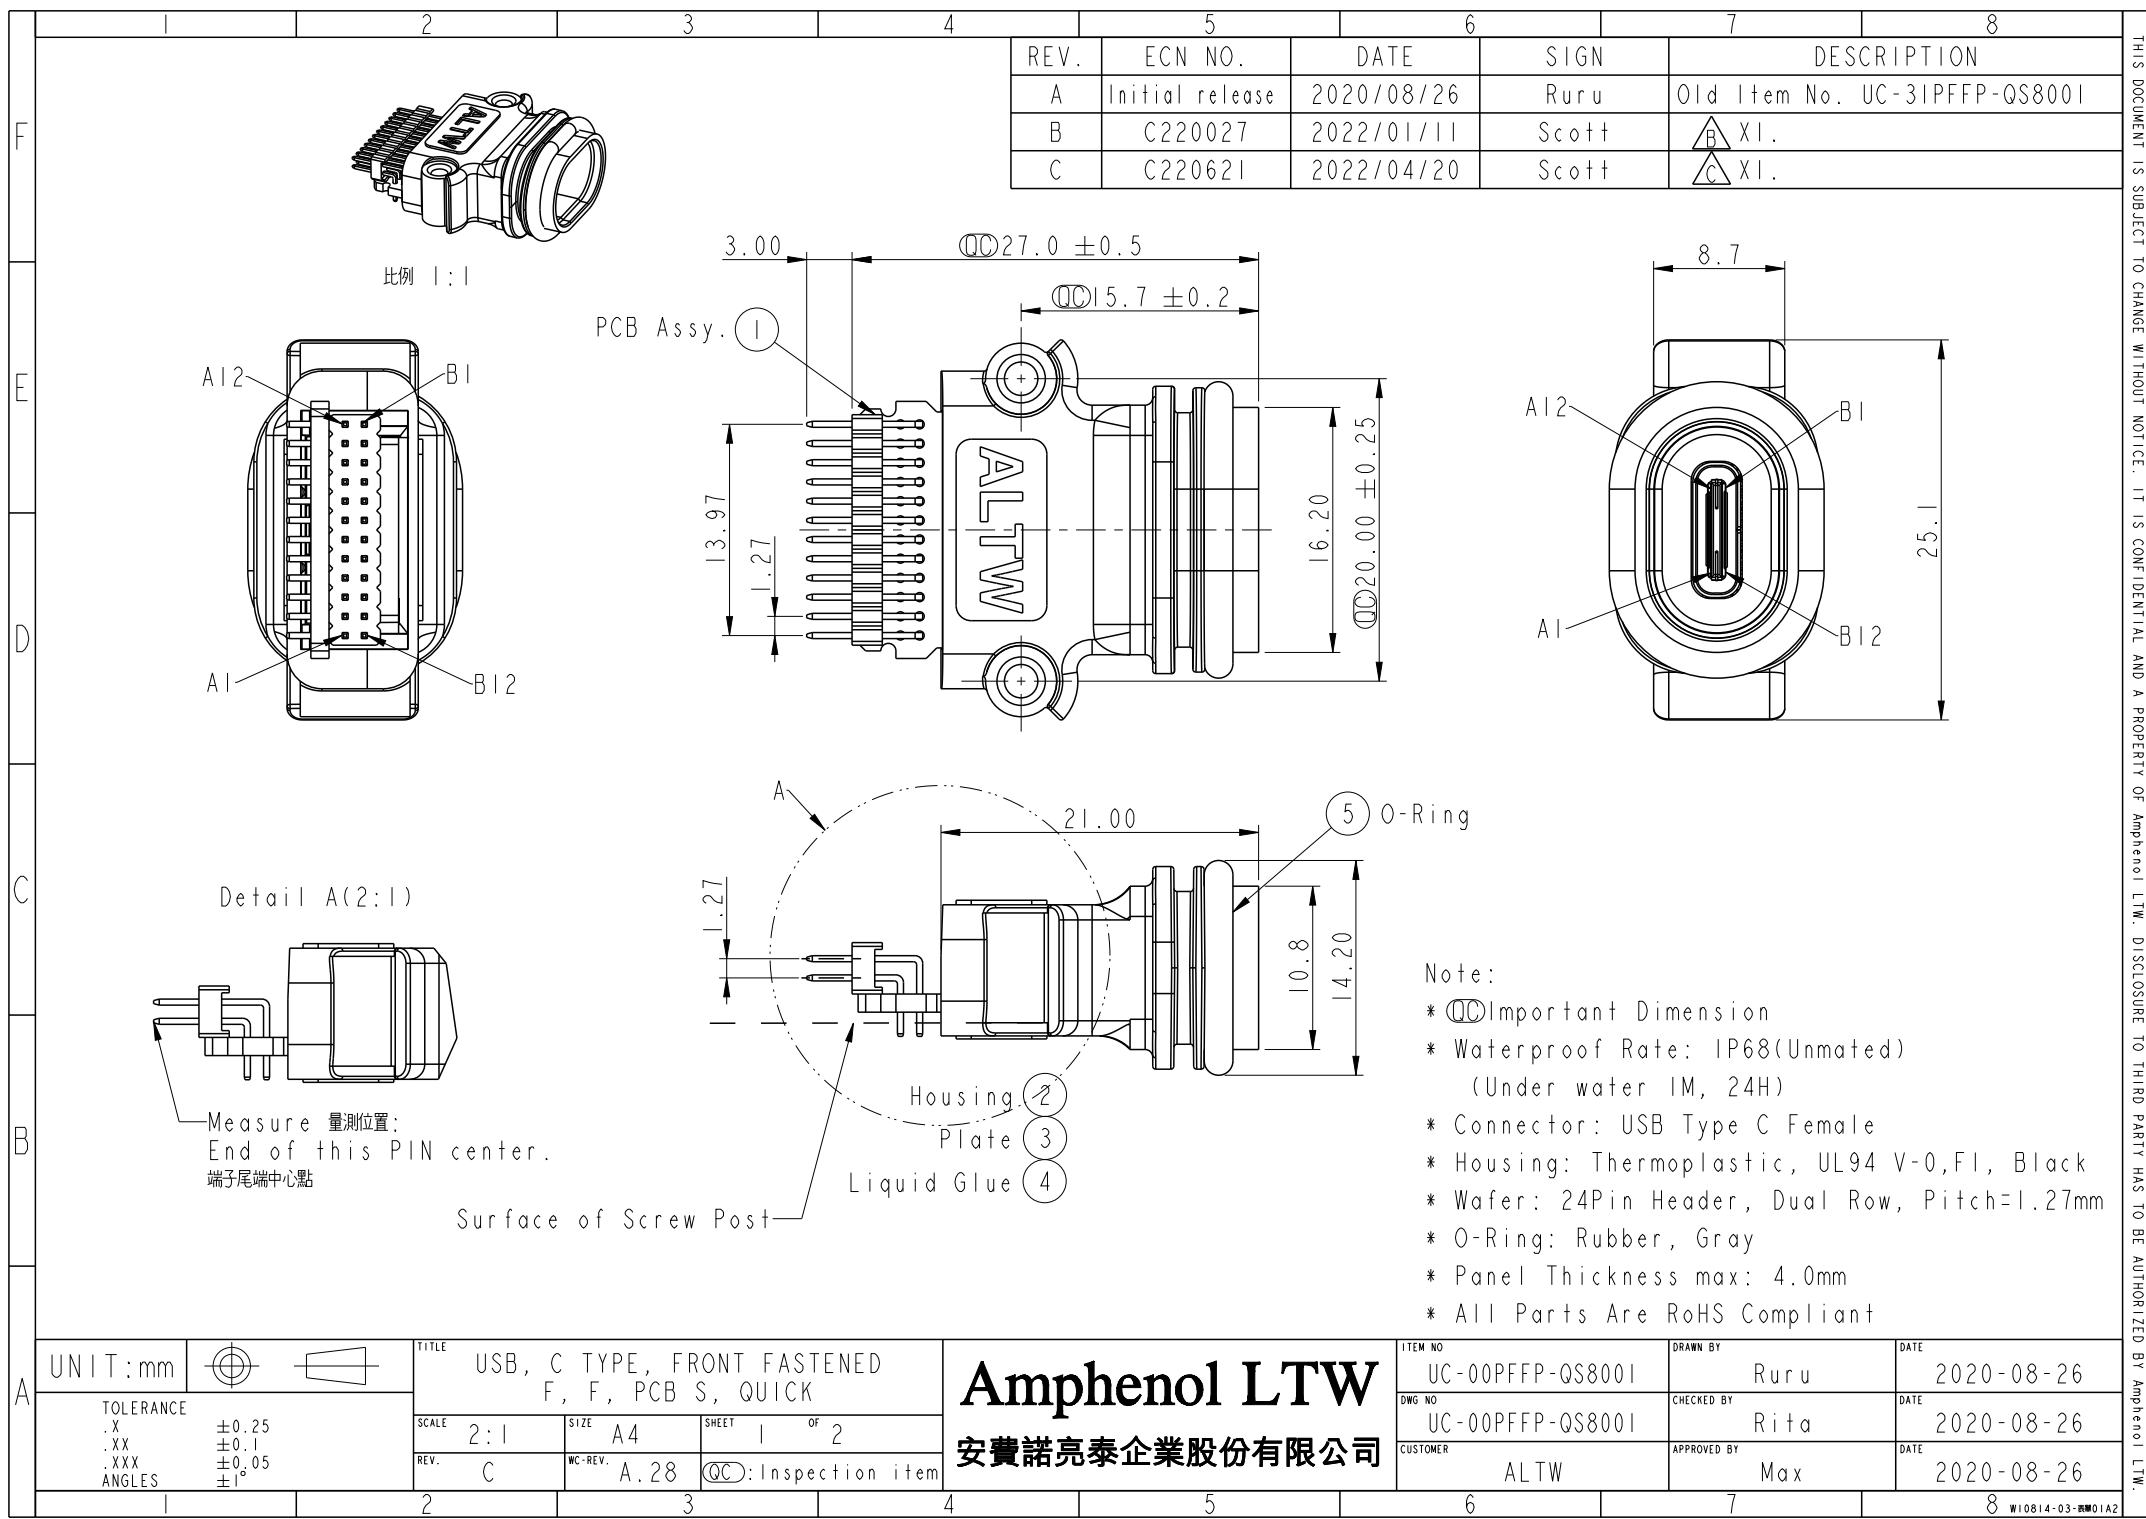


Recommended Panel Cut-Out

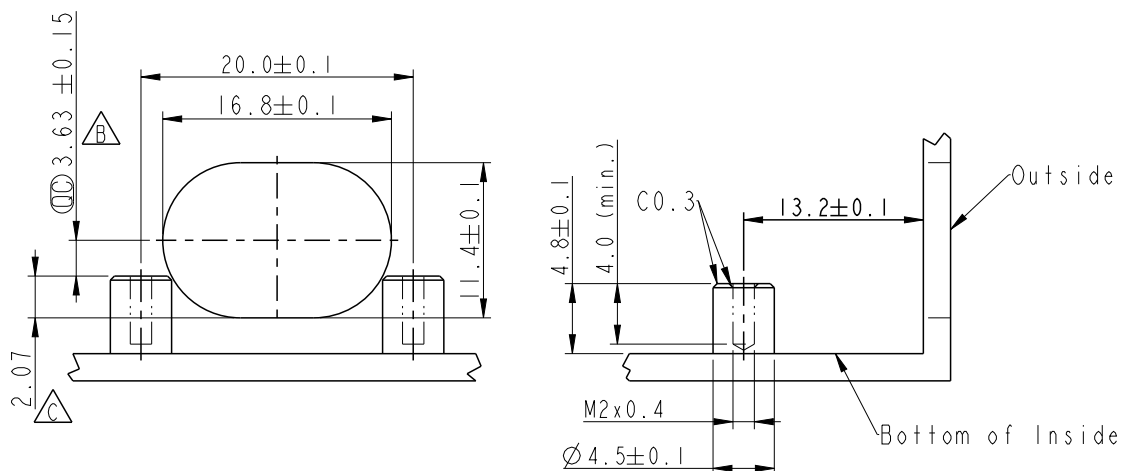


Packing Instructions.




x35pcs in one tray

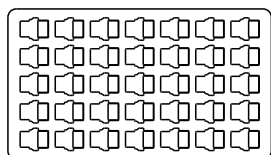

20 Trays in one Box.
(700pcs connector in one Box)

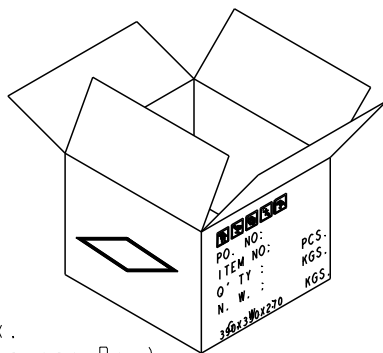


Installation.

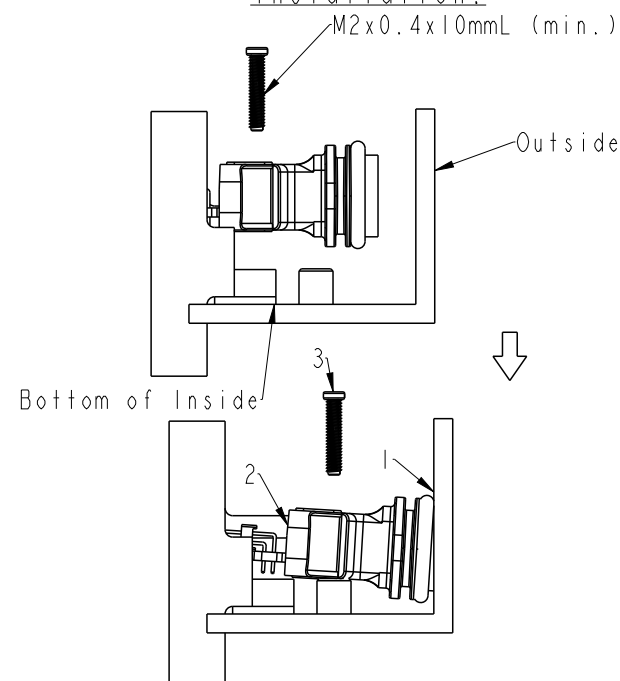


Step 1. Insert the connector into panel-cut by slanted angle.
Step 2. The connector incline downward and engage to screw post.
Step 3. Fastening the screws to fix the connector.

第一步：連接器以傾斜角度插入內孔
第二步：將連接器斜往下壓，與螺絲軸孔卡合
第三步：鎖上螺絲固定

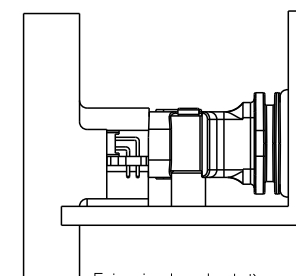

Finished 完成

UNIT:mm



TOLERANCE
.X ±0.25
.XX ±0.1
.XXX ±0.05
ANGLES ±1°

TITLE
USB, C TYPE, FRONT FASTENED
F, F, PCB S, QUICK

SCALE 2:1

SIZE A4

SHEET 2 OF 2

REV. C

WC-REV. A.28

QC: Inspection item

Amphenol LTW
安費諾亮泰企業股份有限公司

ITEM NO
UC-00PFFP-QS8001DWG NO
UC-00PFFP-QS8001CUSTOMER
ALTWDRAWN BY
RuruCHECKED BY
RitaAPPROVED BY
MaxDATE
2020-08-26DATE
2020-08-26DATE
2020-08-26